

C68000K

- (D) Kurzanleitung
- (GB) Quick start guide
- (NL) Beknopte gebruiksaanwijzing
- (F) Mode d'emploi abrégé
- (I) Breve istruzione
- (E) Instrucciones breves
- (P) Instruções sumárias

1. Gerät einschalten

Switching on the appliance


Apparaat inschakelen

Mettre l'appareil en service

Accendere l'apparecchio

Conexión del aparato

Ligar o aparelho

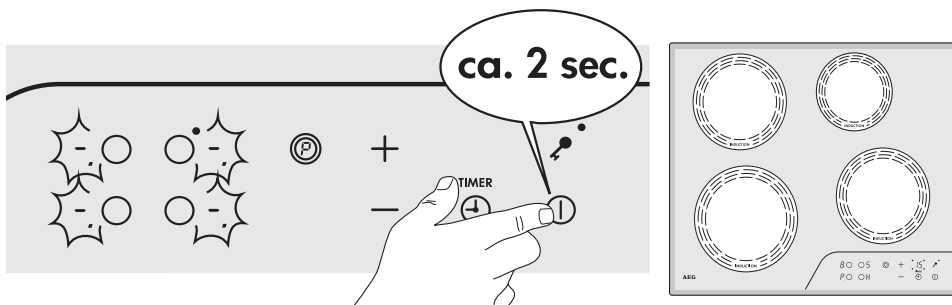

2. Kochzone auswählen

Selecting the cooking zone



Kookzone selecteren

Sélectionner la zone de cuisson

Selezionare la zona di cottura

Selección de una zona de cocción

Seleccionar o foco de aquecimento

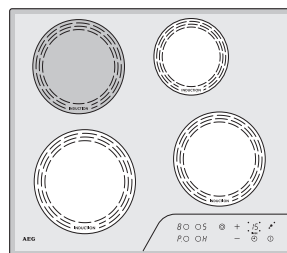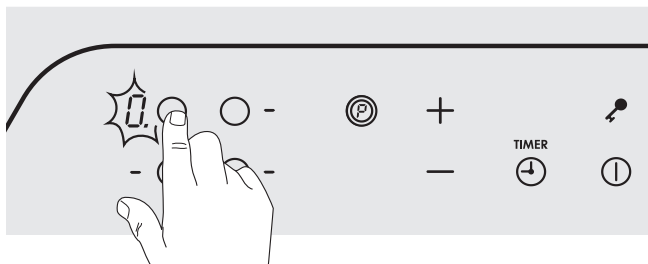

3. Kochstufe einstellen

Setting the heat setting



Kookstand instellen

Régler le niveau de cuisson



Regolare il grado di cottura

Ajuste de la potencia

Ajustar o nível de aquecimento

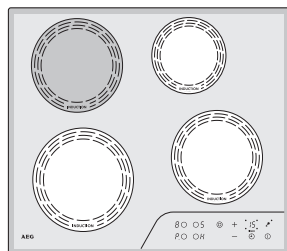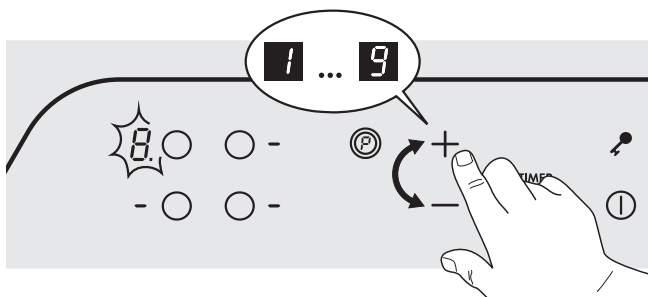

4. Kochzone ausschalten
Switching off the cooking zone
Kookzone uitschakelen
Mettre la zone de cuisson hors service
Disinserire la zona di cottura
Desconexión de la zona de cocción
Desligar o foco de aquecimento

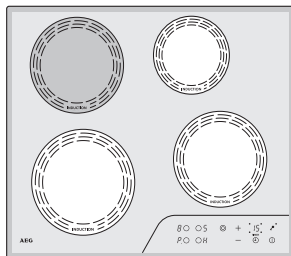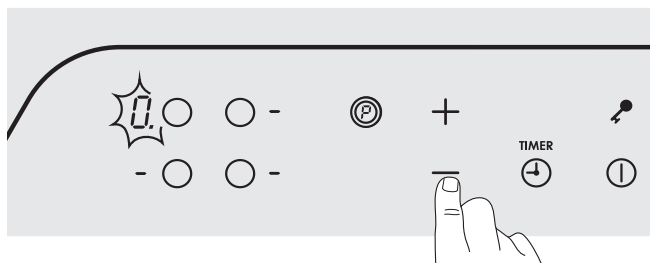

5. Gerät ausschalten
Switching off the appliance
Apparaat uitschakelen
Mettre l'appareil hors service
Spegner l'apparecchio
Desconexión del aparato
Desligar o aparelho

